

AIPHONE

NIM SYSTEM



A simple communication system for medical and commercial fields.

SYSTEM FEATURES

- All call and group call
- Call log
- Powerful sound
- 20/40/60/80 call capacity
- Large variety of sub stations
- Durability and reliability



Satisfying a broad range of needs in

NURSE CALL SYSTEM

Provides reliable communication and enhances the quality of care.



Individual communication with patients is possible by using the bedside handheld sub station.



Call history can be traced and analysed by PC.



COMMUNICATION SYSTEM

Used in a wide range of environments such as highway toll gates and schools.



Outdoor sub station and newly designed indoor sub station.



Broadcast option is available.

Necessary communication for healthcare facilities.

< Examples of System Configuration >

NIM can be used as a nurse call system for providing calls from patient rooms and bathrooms to nurses. Various system configurations offer application flexibility and sophistication. PC connection makes it possible to check call history.

Patient Ward

Private room with bathroom

- Bedside handheld sub station NI-RC
- Bathroom call button with pull cord NIR-7HW
- Wall jack with hanger for NI-RC NIR-HPF
- Corridor light, multiple beds NIR-4S
- Call reset button NIR-2

Single bed communication (bedside handheld sub station) Page 5.

- Bedside handheld sub station NI-RC
- Wall jack with hanger for NI-RC NIR-HPF
- Bathroom call button with pull cord NIR-7HW
- Corridor light with nameplates, 4 names NIR-34

Multiple-user communication (shared)

- Handheld call button NBR-8A
- Wall jack with microphone for NBR-8 NIR-MB

Lounge area

- Sub station, surface mount NI-BA

Private room Page 5.

- Sub station, surface mount NI-BA
- Corridor light with buzzer NIR-4BZ
- Call reset button NIR-2


Outpatient Floor

Examination room Page 10.

- Sub station, surface mount NI-BA

Corridor

- Ceiling speaker NI-LB

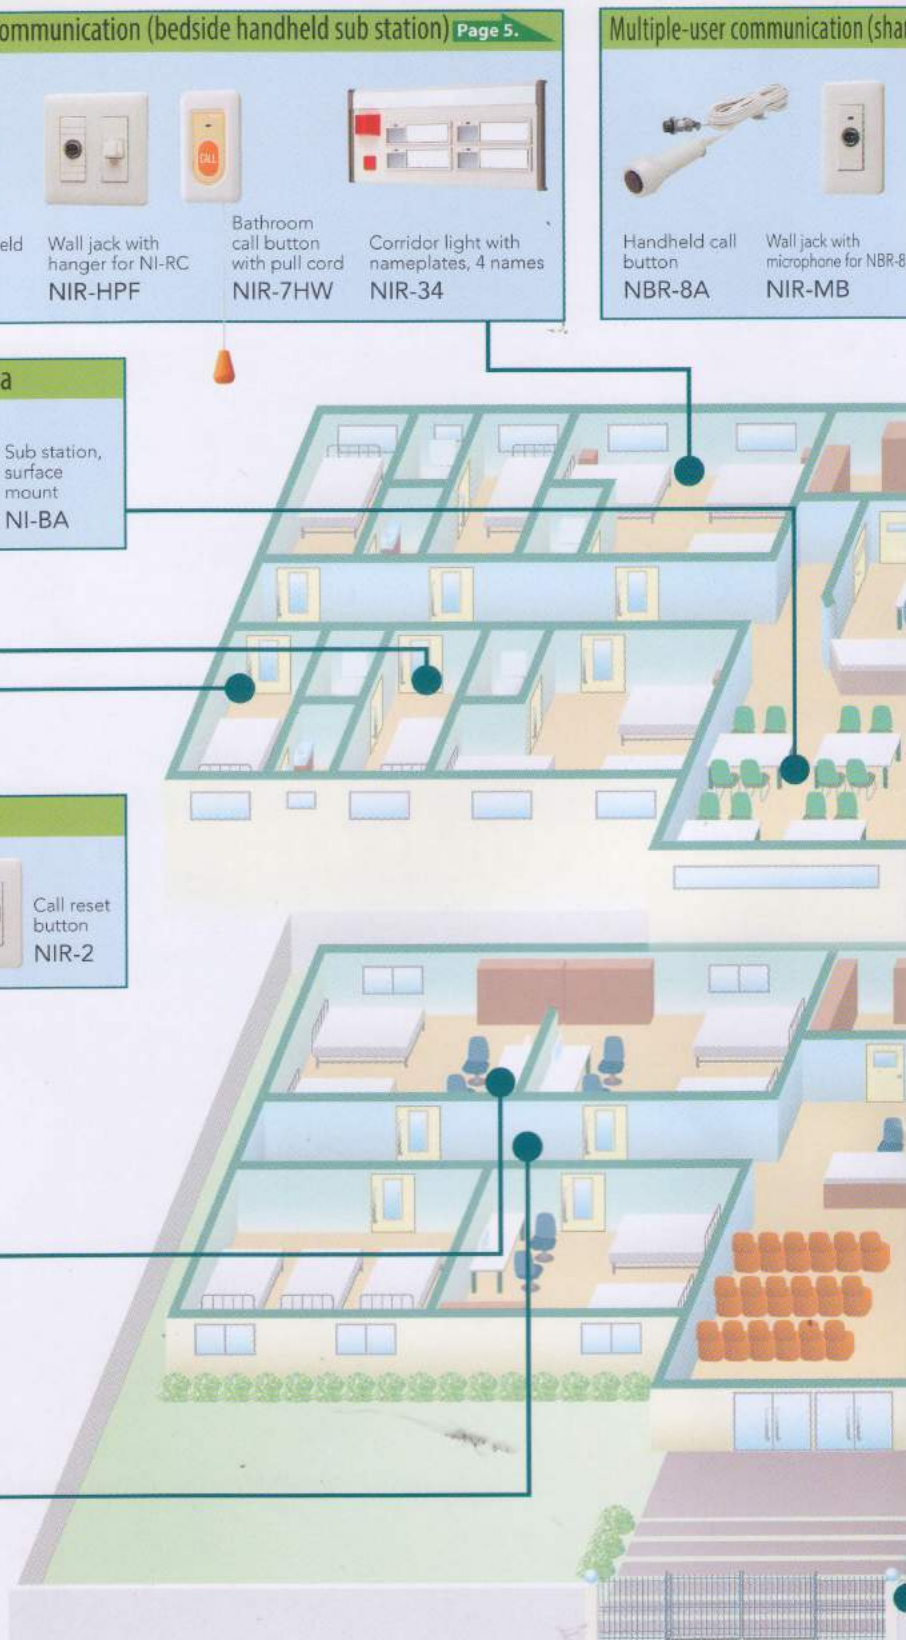

stations.

Speaker and individual microphone) Page 7.

Ceiling speaker NI-LB
Corridor light, single bed NIR-4
Call reset button NIR-2

Multiple-user communication (ceiling speaker and ceiling microphone) Page 7.

Handheld call button NBR-8A
Wall jack for NBR-8A NIR-1
Ceiling microphone NI-SB
Ceiling speaker NI-LB
Corridor light, single bed NIR-4
Call reset button NIR-2

Bathroom Page 9.

Corridor light, single bed NIR-4
Call reset button NIR-2
Bathroom call button with pull cord NIR-7HW

Nurse station Page 11.

Master station, 40-call NIM-40B
Power supply IS-PU
Call log software NI-SOFT + PC (Third party product)

Outpatient admissions

Master station, 20-call NIM-20B
Power supply IS-PU

Employee service entrance Page 10.

Sub station, flush mount NI-JA

General service entrance Page 10.

Sub station, flush mount NI-JA

Personal communication ensures the privacy

Single bed communication :


Communication system using a speaker and a microphone at each bed.



■ Examples of Equipment Application

3-bed room with bathroom

< Installation using bedside handheld sub station >

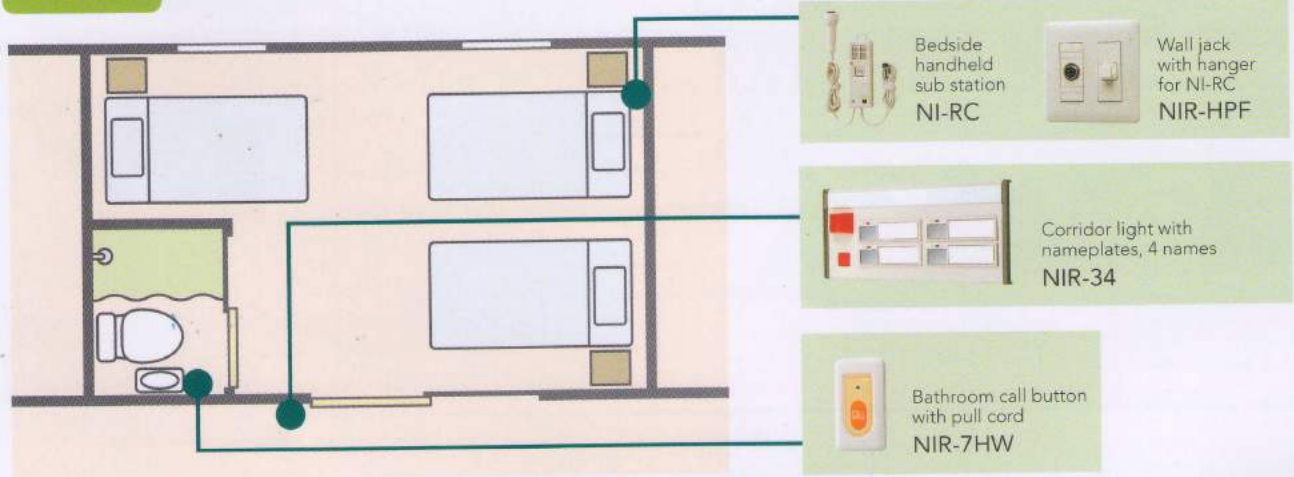

Bedside handheld sub station
NI-RC

Wall jack with hanger for NI-RC
NIR-HPF


Corridor light with nameplates, 4 names
NIR-34

Bathroom call button with pull cord
NIR-7HW

Private room

< Installation using desk mount sub station >

Corridor light with buzzer can be used for notification of calls from patients requiring special attention.

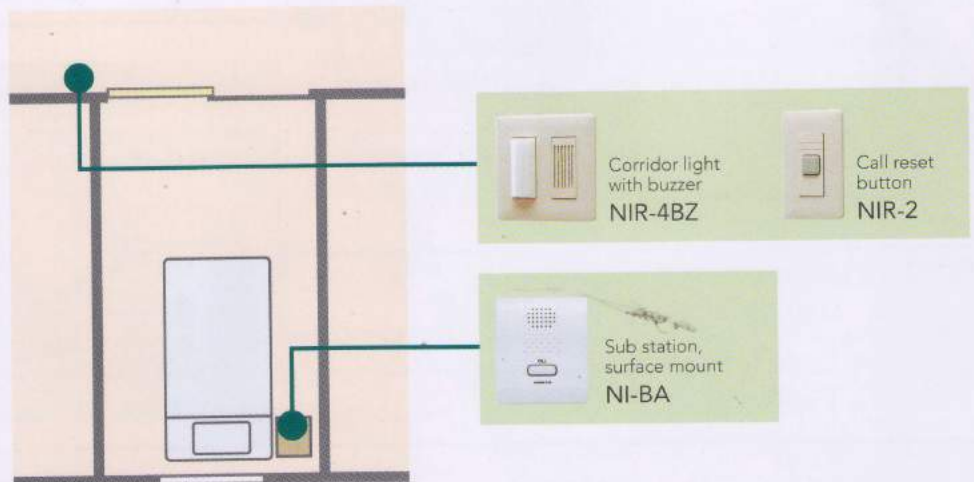


Corridor light with buzzer
NIR-4BZ

Call reset button
NIR-2


Sub station, surface mount
NI-BA

acy of your patients.


■ Features




Push the call button.




Bedside handheld sub station NI-RC

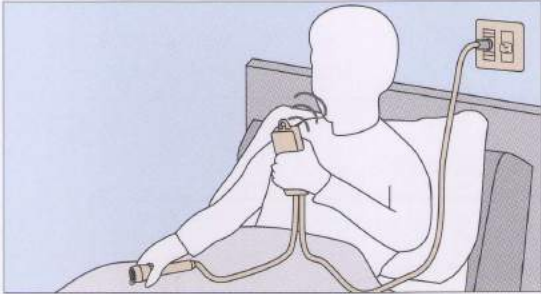

Bedside handheld sub station is used to communicate with the nurse station.

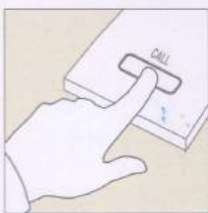



The desk mount sub station can be used for calls and communication also.




Sub station, surface mount NI-BA




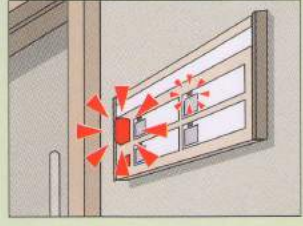
When a call is received, the indicator blinks to notify where the call is made from.



Master station

Lighted lamps in corridor enable nurses to notice calls easily and respond to the patient quickly.





Corridor light with nameplates, 4 names NIR-34

■ Using the system at the master station

● **Answering with handset**

Lift the handset and talk with the caller.




Lights up in green.

Lights up in red only when speaking.

● **Answering in open voice mode**

Push and hold **TALK** to begin talking with the caller.

Release **TALK** to listen.

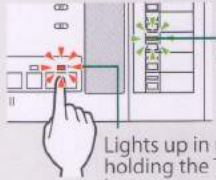


Lights up in green.

Lights up in red while holding the TALK button pressed.

● **When receiving two or more calls***

Push the station selector button to select the desired call.** Then, talk with the caller by using the handset or pressing the **TALK** button.

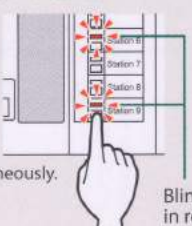


Blinks in red.

* Maximum of 10 calls can be received simultaneously.
** If this step is skipped, the first-arrived call is automatically selected.

● **Calling a single sub station**

Push a call selector button to call the desired sub station. Then, talk with the caller by using the handset or pressing the **TALK** button.



Lights up in green.

Shared communication for multiple-occupa


Multiple-user communication :

Communication system using a ceiling speaker and a microphone for communication with the entire room.




■ Examples of Equipment Application

4-bed room < Installation using ceiling microphone and ceiling speaker >

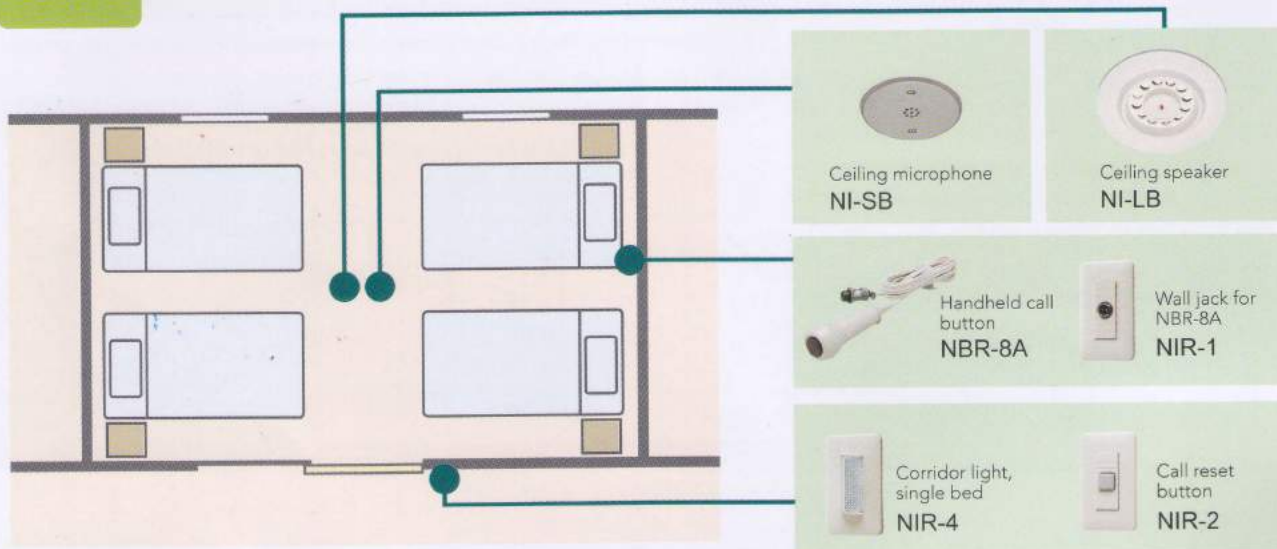

4-bed room < Installation using wall jack with microphone and ceiling speaker >

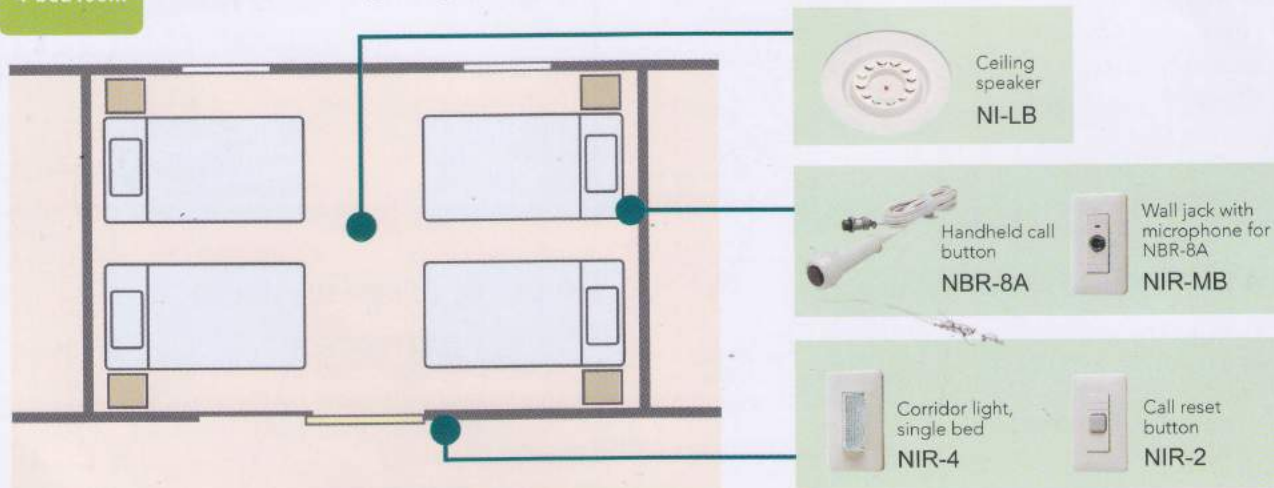

ncy patient rooms is possible.

■ Features




Push the call button.



Handheld call button
NBR-8A

The user speaks toward the ceiling microphone and hears the reply from the ceiling speaker.

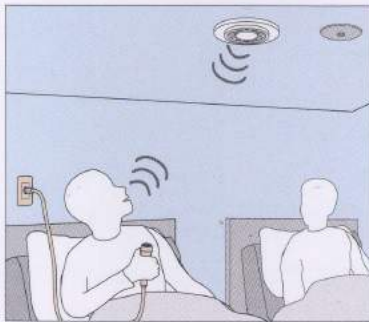


Ceiling speaker
NI-LB



Ceiling microphone
NI-SB

Communication is also possible by using a bedside wall jack with microphone instead of the ceiling microphone.

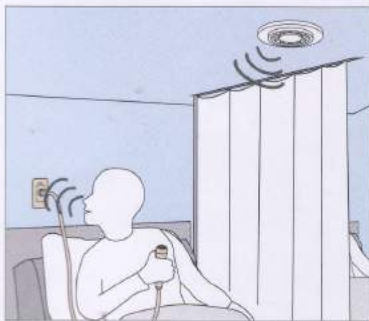

Ceiling speaker
NI-LB

Microphone





Wall jack with microphone for
NBR-8A
NIR-MB

The user speaks toward the wall jack and hears the reply from the ceiling speaker.



When a call is received, the indicator blinks to notify where the call is made from.

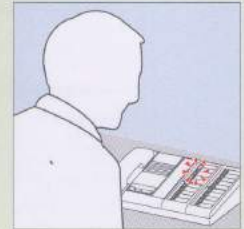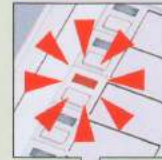


Master station

For more information on master station use see [Page 6](#).

Lighted lamps in corridor enable nurses to notice calls easily and respond to the patient quickly.




Corridor light, single bed
NIR-4

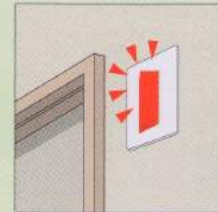


NURSE CALL SYSTEM » Bathroom call button, Sub stations

Quick response is possible in the case of emergencies in bathrooms.

Receiving a call is possible from a patient in a hospital bathroom.

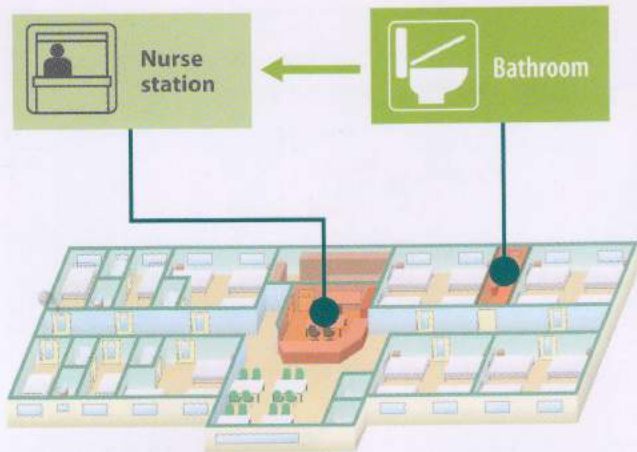

Examples of Equipment Application

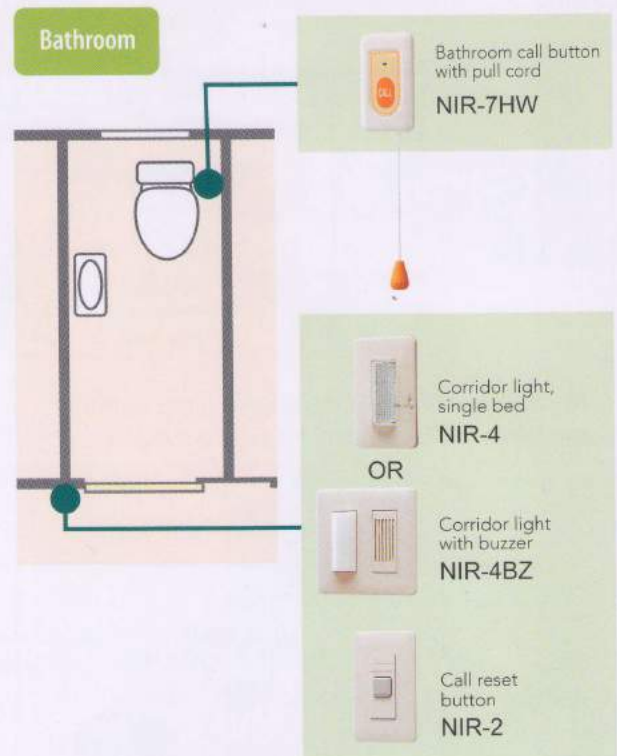

Features

The user pushes the call button or pulls the cord to call for assistance. The call indicator lights up while calling.

Bathroom call button with pull cord
NIR-7HW



When a call is received, the indicator blinks to notify where the call is made from.

Master station


Lighted lamps in corridor enable nurses to notice calls easily and respond to the patient quickly.

Corridor light, single bed
NIR-4

Buzzer-equipped stations notify calls by flashing LED with buzzer sound.

General purpose sub stations for multiple purposes.

Desk mount sub station can be used for internal communication.

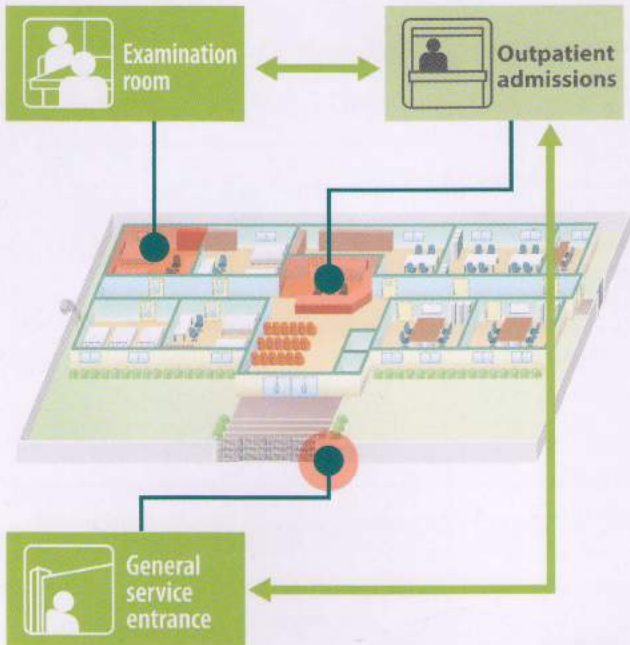


Flush mount outdoor station allows communication from outside the hospital.

■ Features


■ Examples of Equipment Application

Examination room

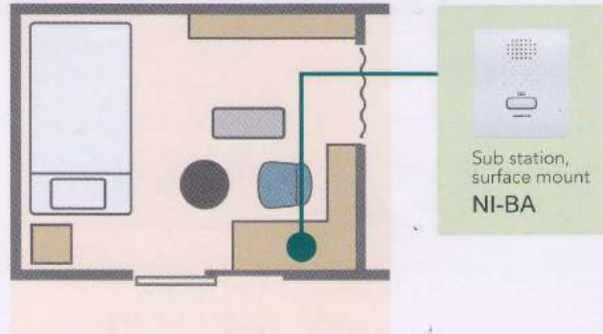

Sub station, surface mount
NI-BA

General service entrance

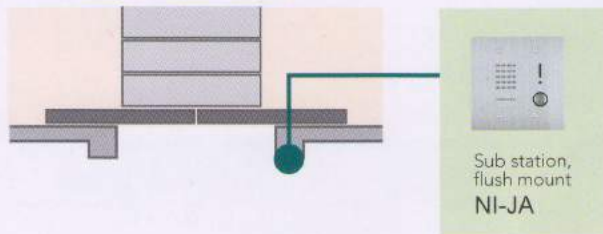


Sub station, flush mount
NI-JA

Sub station, surface mount (NI-BA)



New slim and smart design

● Usage examples

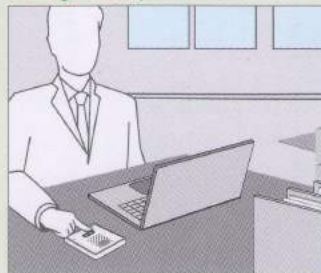

Staff rooms and common-use areas




Bedside

Sub station, flush mount (NI-JA)




Vandalism- and weather-resistant – ideal for outdoor installations

● Usage examples

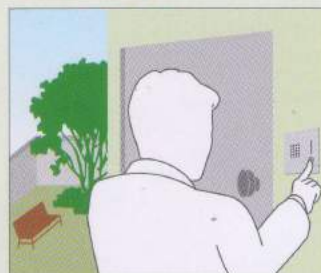


Courtyards

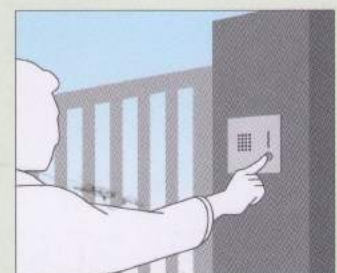

Communication for visitors


Useful for tracing call history and improving

Connecting a computer to the master station helps to manage patient information, call history, and call-response data.

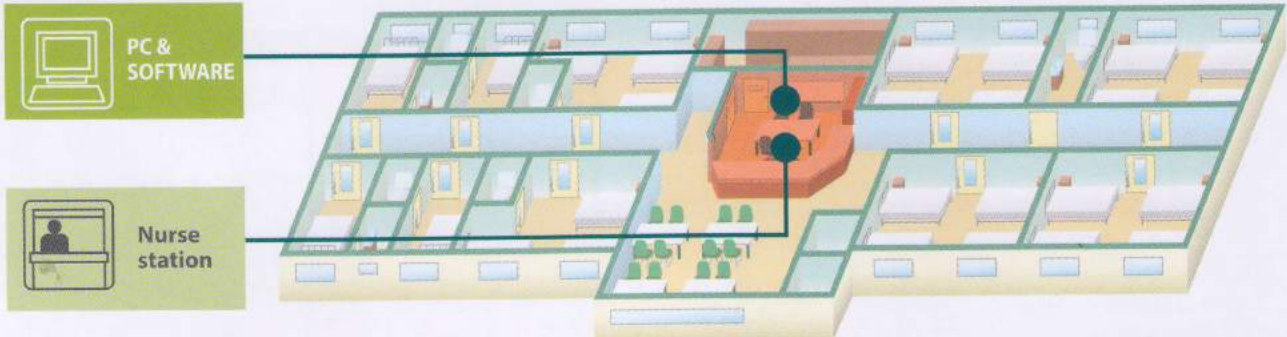


■ Examples of Equipment Application

Nurse station

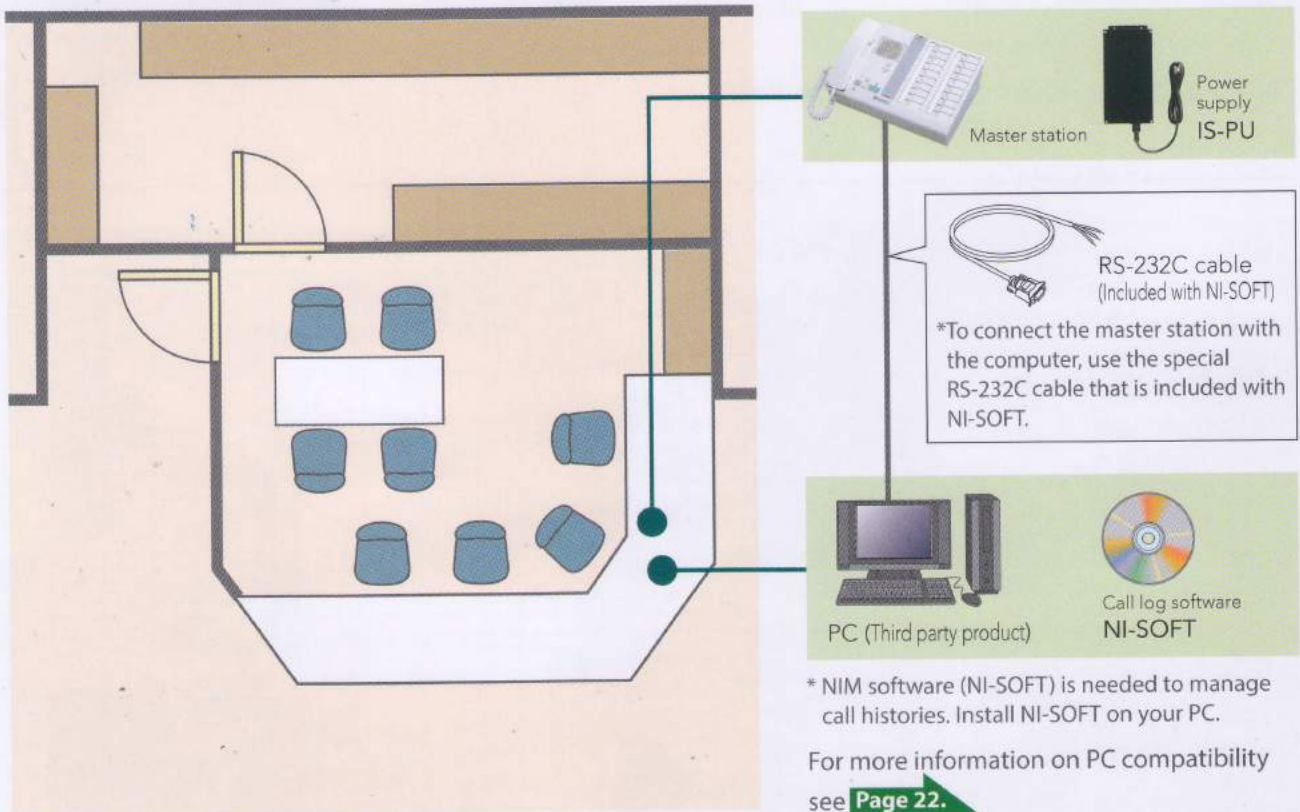

service quality.

■ Features

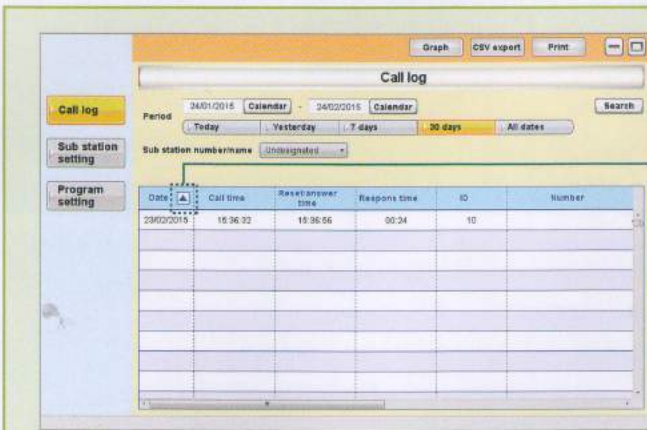

List and search from call history

Date	Call time	Reset/answer time
------	-----------	-------------------


Call history can be searched by date, call time, sub station number, etc.

Name/Remarks
Seiji Yokoi, diabetes, check hourly
Taylor Wyatt, pneumonia, check daily
Isolation room, NO ENTRY

Additional information can be freely entered in the "Name/Remarks" field.


➔ Search results can be printed out or exported into CSV-format files.

Example of graph display

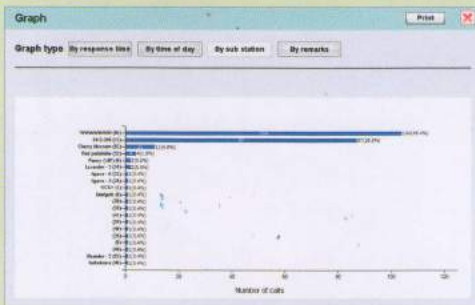


● Number of calls from sub stations

This allows nursing staff to see which patients have the highest number of calls, enabling management to schedule and prioritize care.

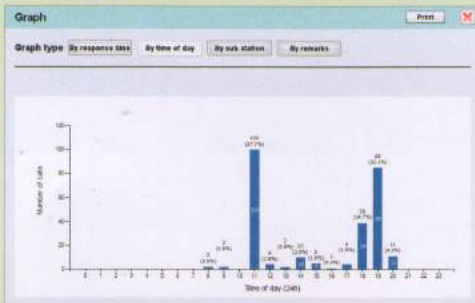

● Number of calls during different times of day

This enables verification of peak-time trends, enabling management to adjust staffing accordingly.

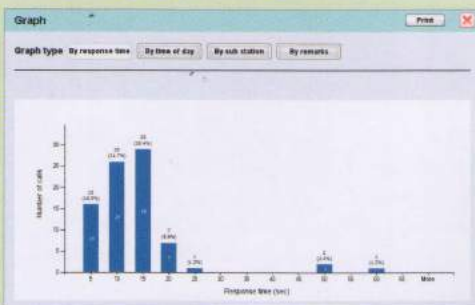

● Response time for calls

View the number of seconds from call to response, which can be useful in improving the level of service.


The image is simulated.

A communication system specialized for sim


< Examples of System Configuration >

NIM system can be used for reliable communication. It can also be used in challenging conditions and noisy environments. This opens the door for various business and administrative applications.

Example of Installation at a Toll Gate

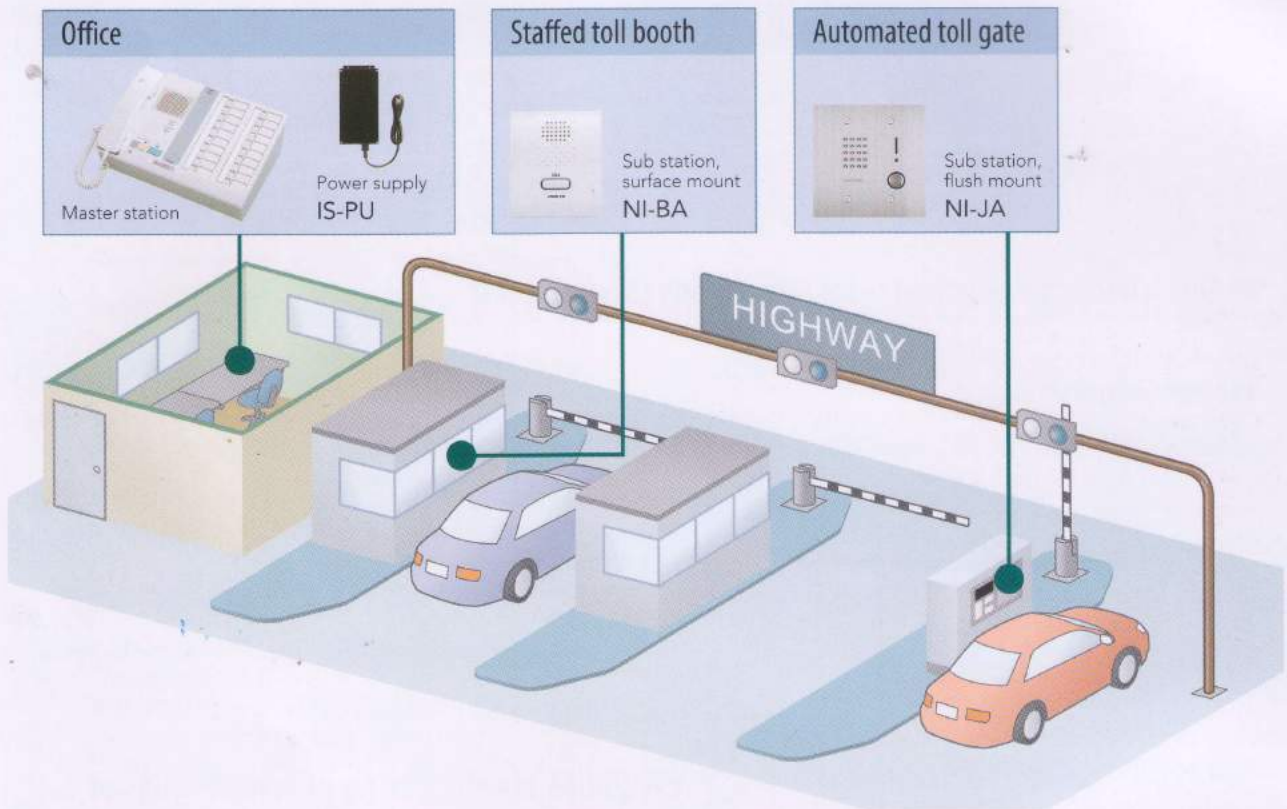


Other Examples of Installation (NI-JA)

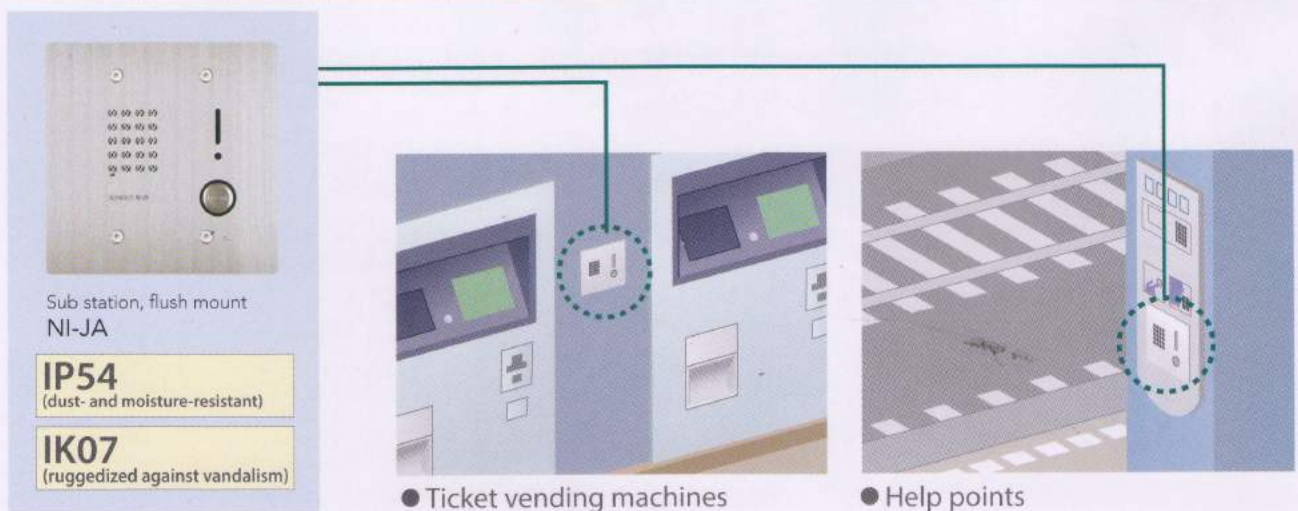


ple "call" and "communication" functions.

Examples of Equipment Application

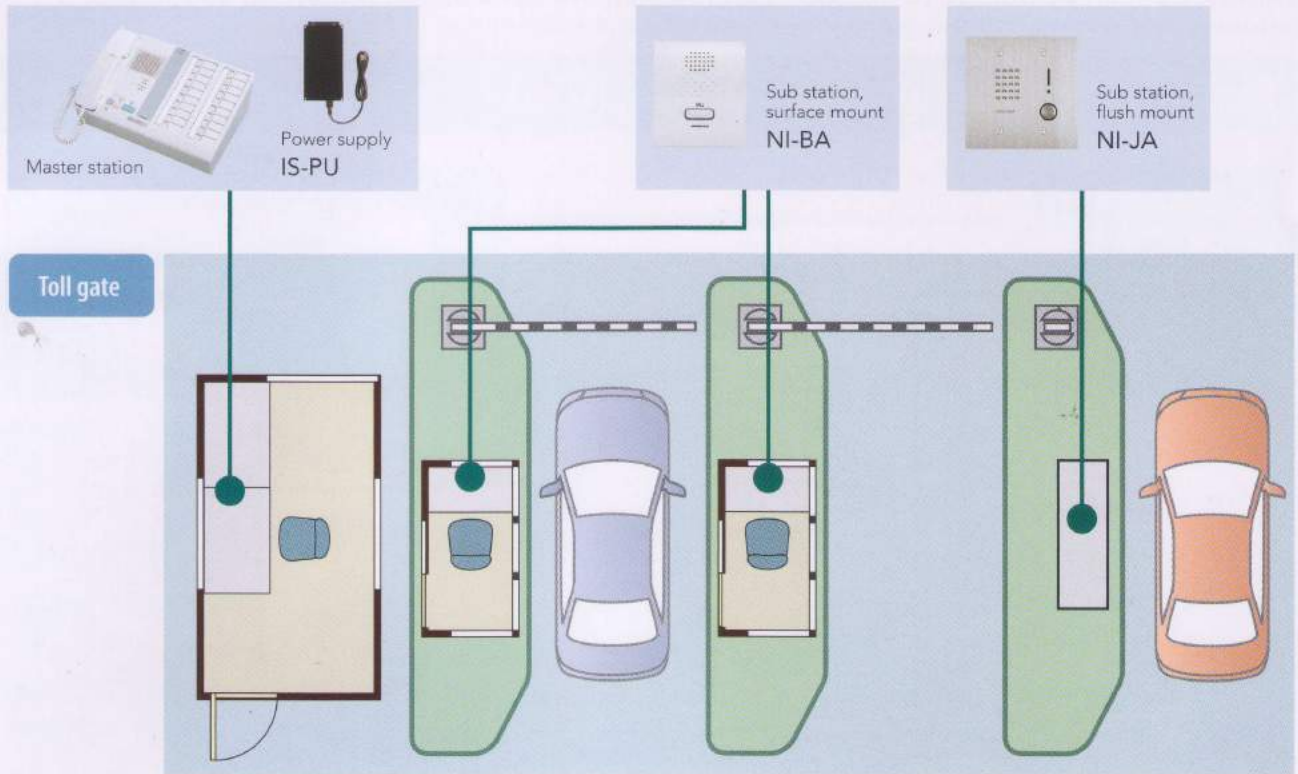

Features

Large button allows easy operation. Communication is enabled by a single push of the button.

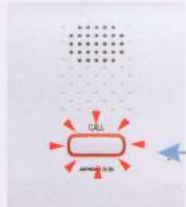


Flush mount sub station is weather- and vandalism-resistant.



The call indicator on the sub stations provides visual indication of call status. Lit while being called, off during communication.

When a call is received, the call indicator blinks to signify which booth is sending the call.

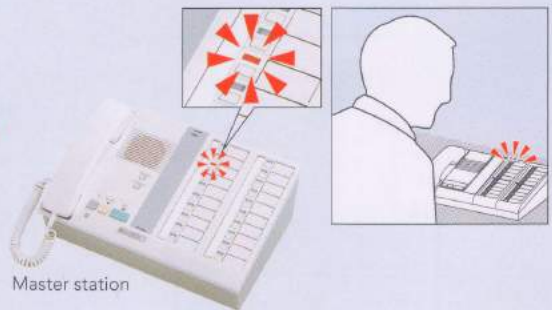


For more information on master station use see **Page 6.**

NIM system can be used for communication

< Examples of System Configuration >


NIM system can be utilized to broadcast announcements to selected stations or all stations.

Example of Installation in a School

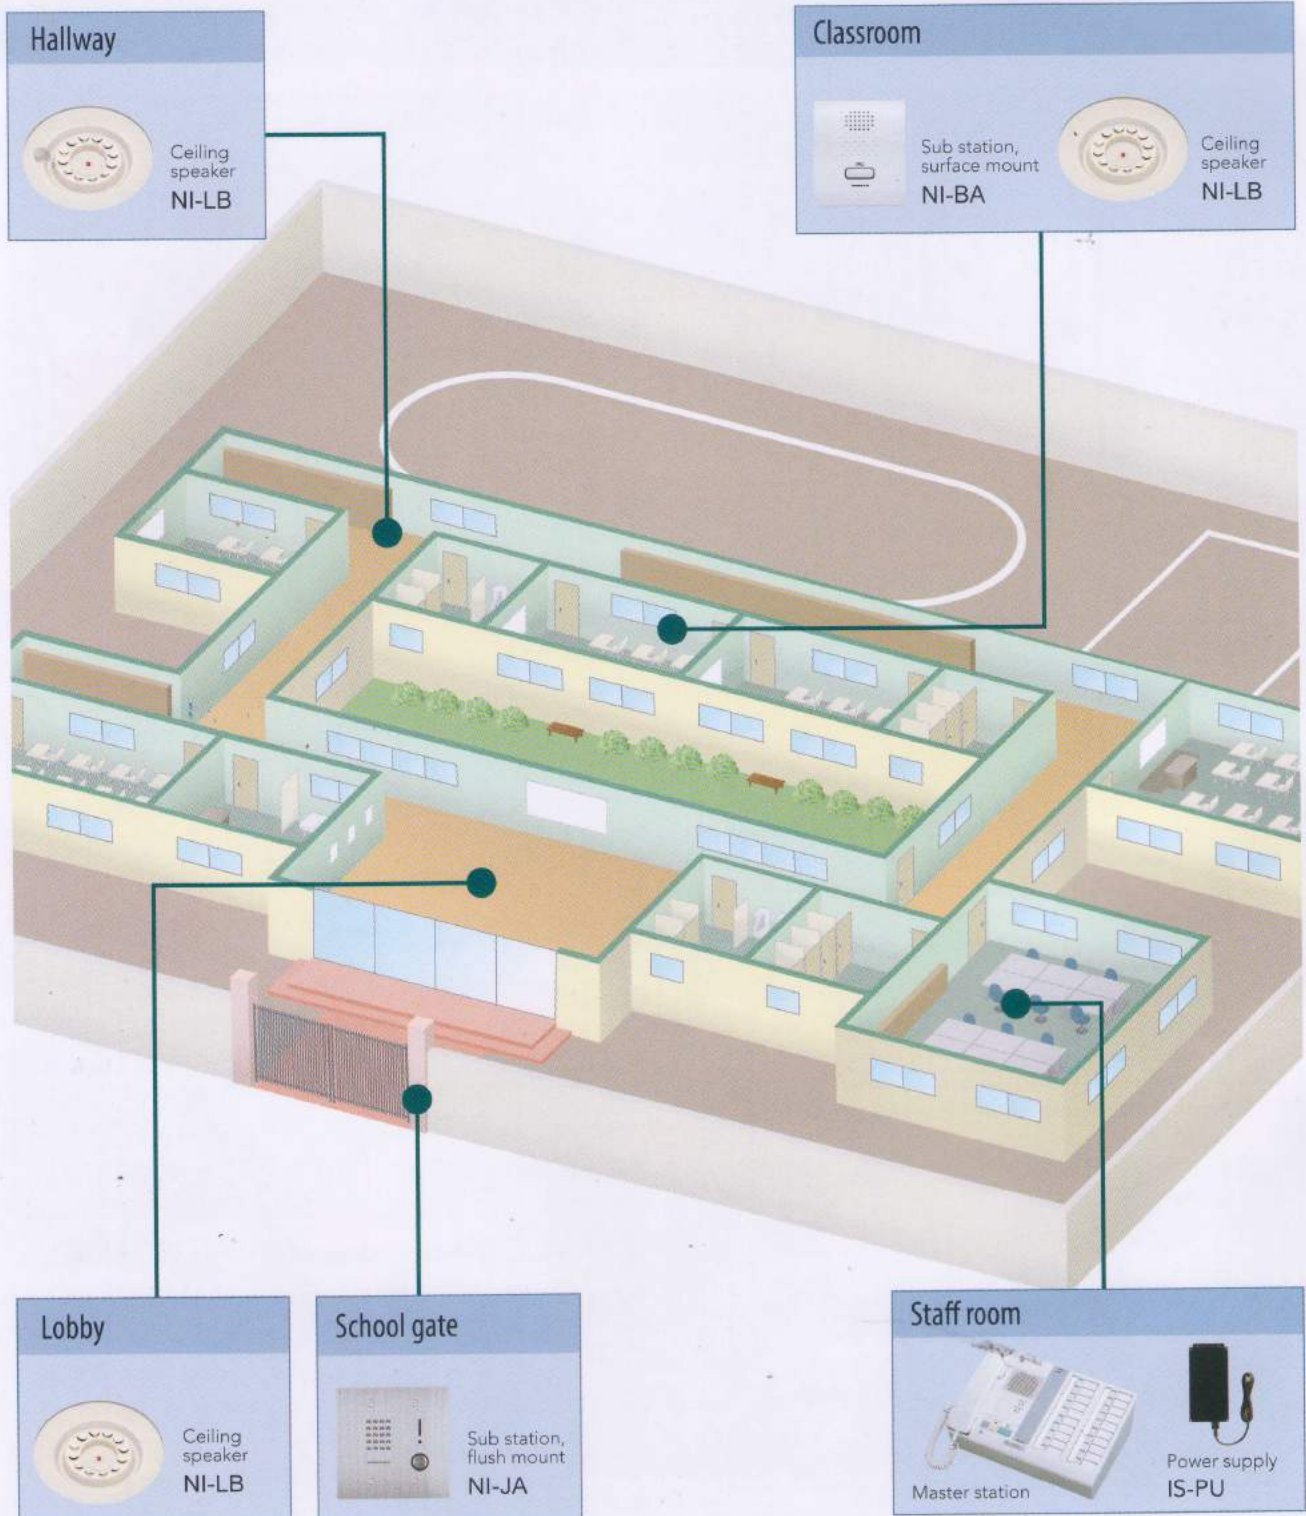

and broadcasting.


Examples of Equipment Application

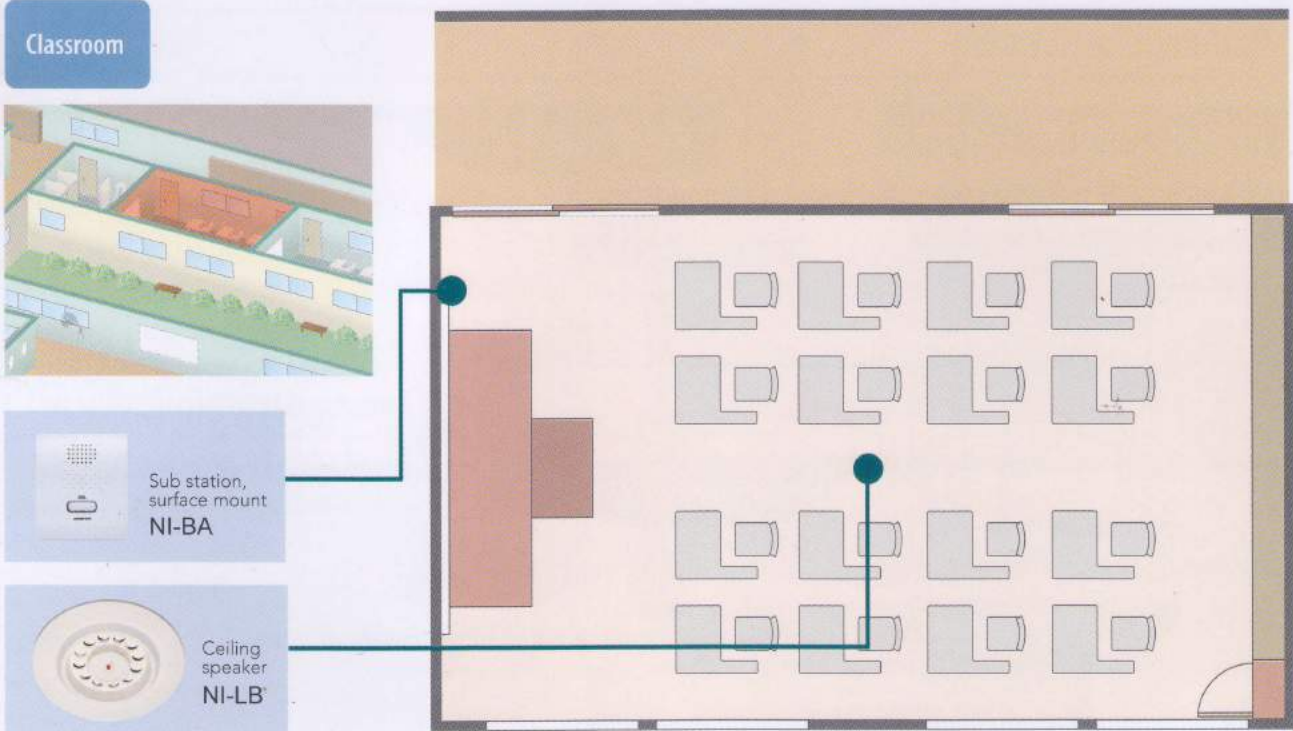



Features

Broadcast to all stations

Broadcasting to all sub stations is possible.

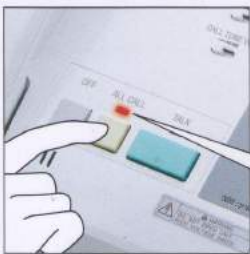


Push the **ALL CALL** button. Then start broadcasting by using the handset or pressing the **TALK** button.

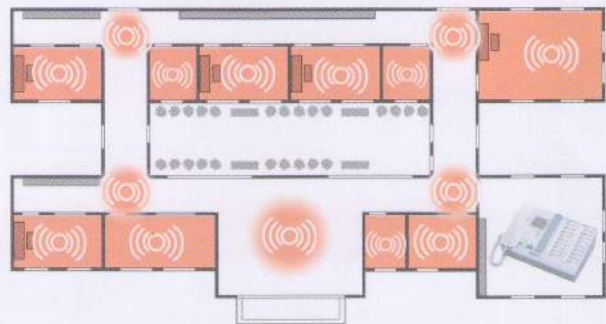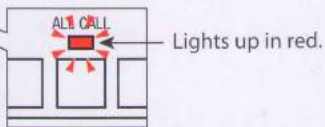


A pretone is heard at all the sub stations before the broadcast.

Group broadcasts to selected stations

Broadcasts limited to selected classrooms are possible. Push the station selector button(s) for the target sub station(s).

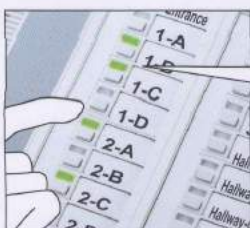


The call-in indicator(s) for the selected station(s) blink(s) in green.

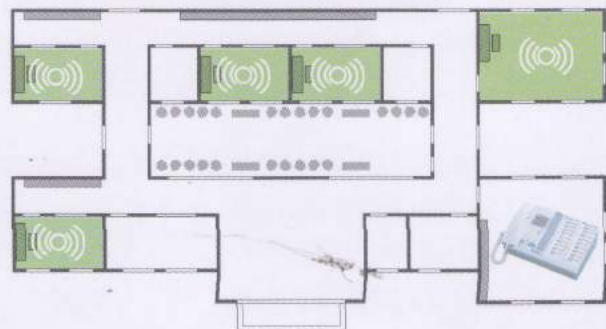

Group broadcasts can be made to up to 5 sub stations.

and broadcasting.


■ Examples of Equipment Application

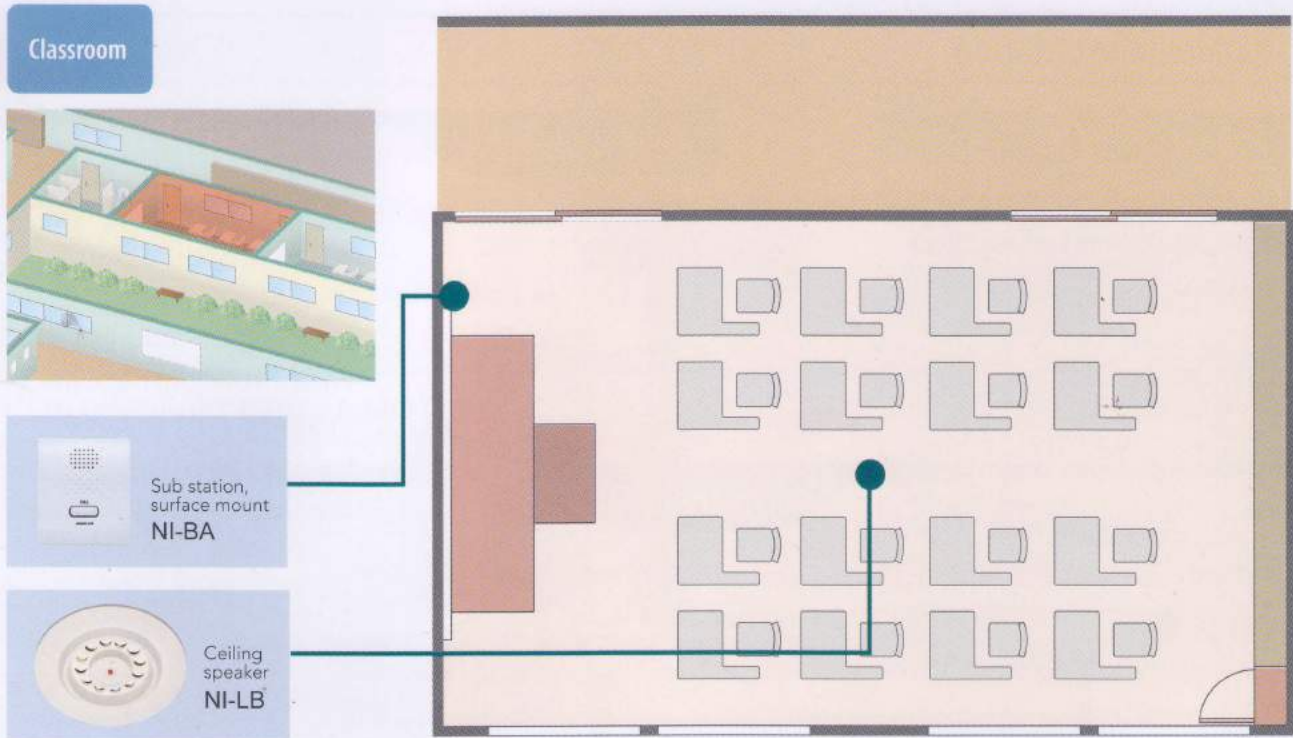

■ Features

● Broadcast to all stations



Broadcasting to all sub stations is possible.

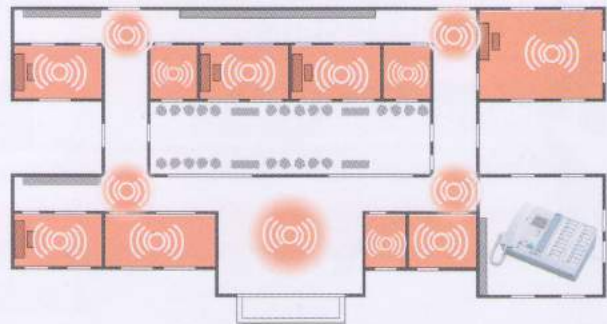

A pretone is heard at all the sub stations before the broadcast.

● Group broadcasts to selected stations

Broadcasts limited to selected classrooms are possible. Push the station selector button(s) for the target sub station(s).

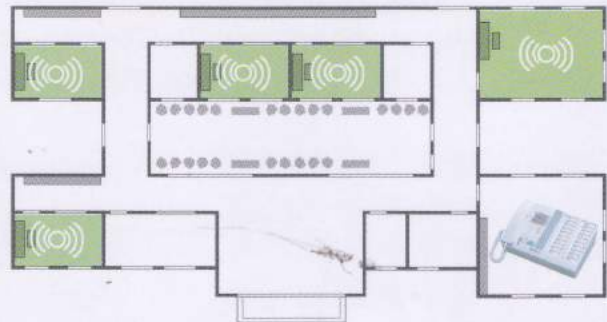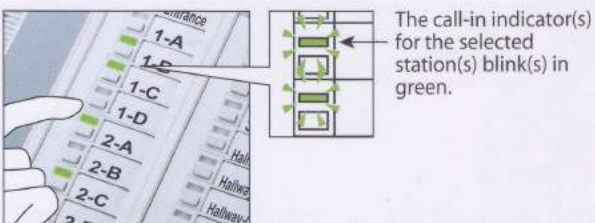

Group broadcasts can be made to up to 5 sub stations.

Upgrade from an existing NEM system.

Handheld sub station

Original system (NEM system)

Privacy is difficult to maintain using ceiling sub station.



NIM system



- The handheld sub stations are equipped with a microphone and speaker, enabling communication with individual patients.
- Private communication helps to provide more detailed care of patients.

Desk mount sub station

Original system (NEM system)

The design does not meet current needs.



NIM system

- The system has been reborn with a stylish design, maintaining the same features.



Note : When upgrading from NEM system to NIM system, all system components and wiring need to be changed.

Flush mount sub station

Original system (NEM system)

The previous sub station had limited application scope.



NIM system

- The new sub station is vandalism- and weather- resistant. This allows installation in a wider range of areas.



IP54
(dust- and moisture-resistant)

IK07
(ruggedized against vandalism)

Corridor light with nameplates


Original system (NEM system)

No identification of individual calls.



NIM system


- Easy identification of calls, thanks to our new corridor lamp with nameplate.

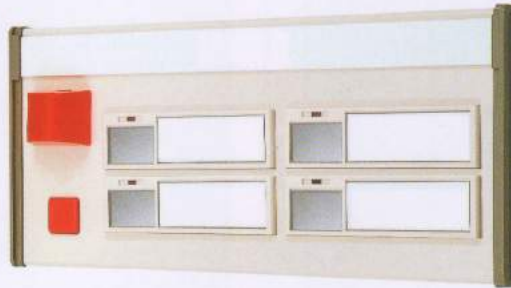

Call log software

Original system (NEM system)

Simple communication.

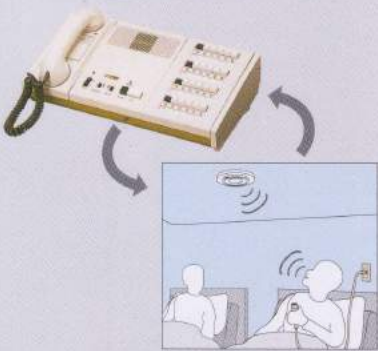


NIM system





- Connectable to PC for call history, patient information, and call-response data. No need for an Internet connection. Using a RS-232C cable is enough for PC connection.



SYSTEM CONFIGURATION

System configuration example. Wiring method is subject to system configuration.

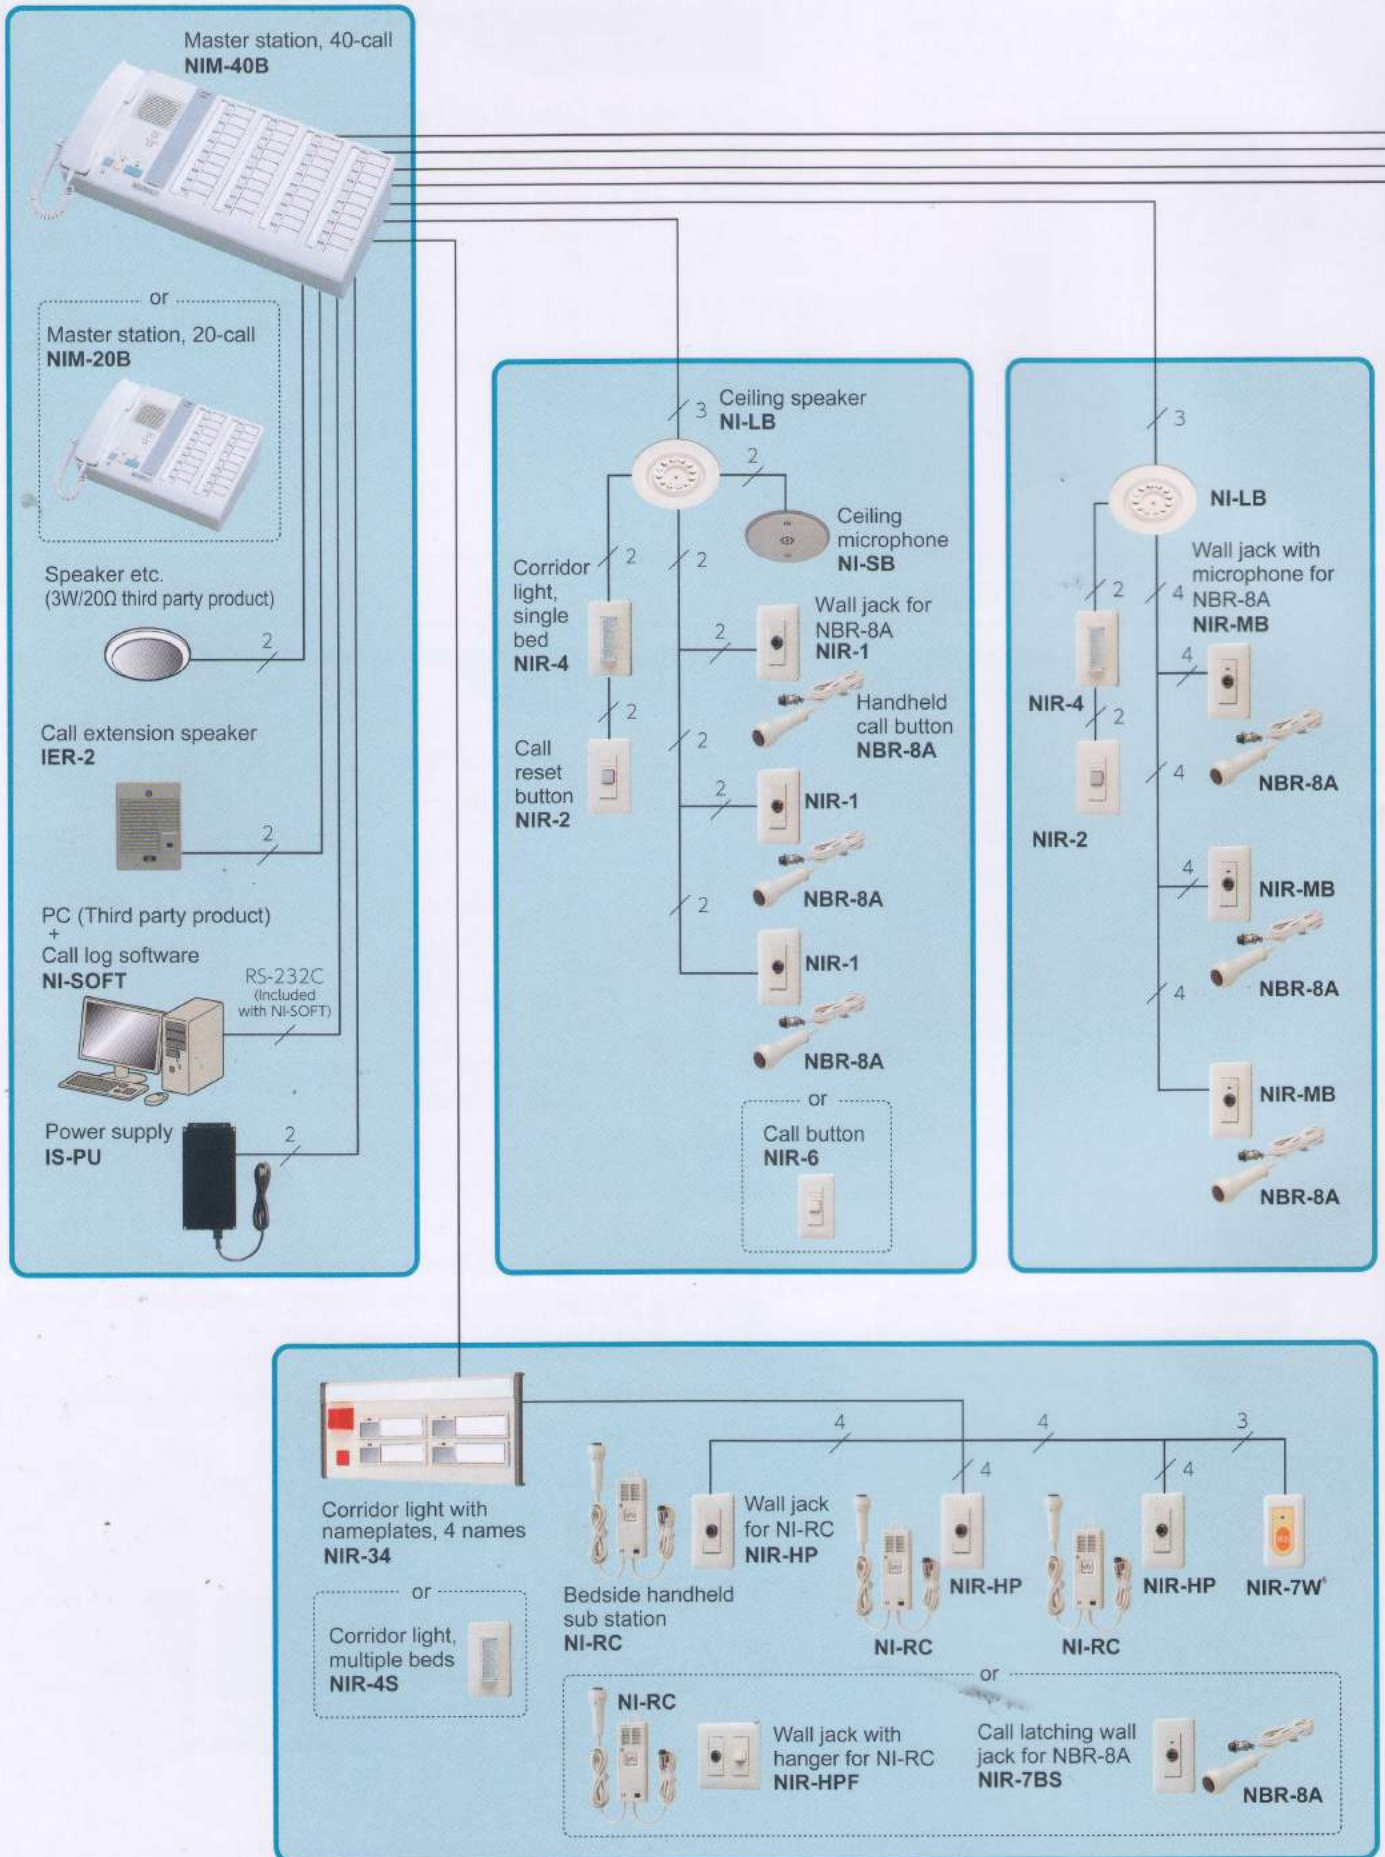

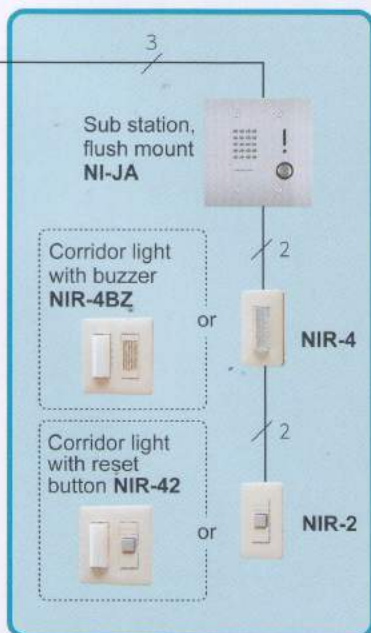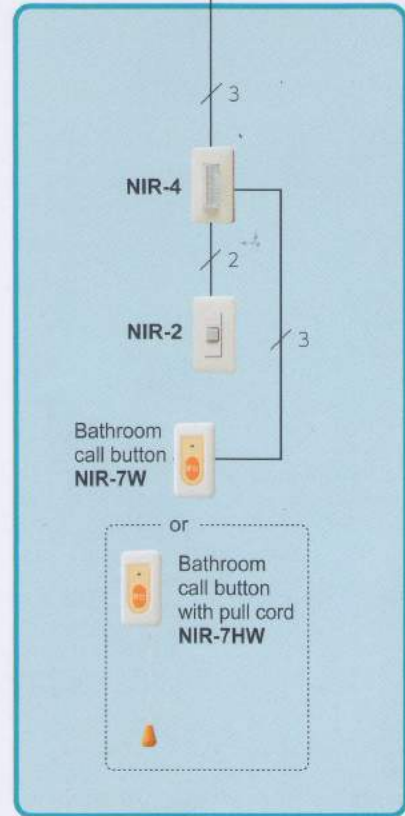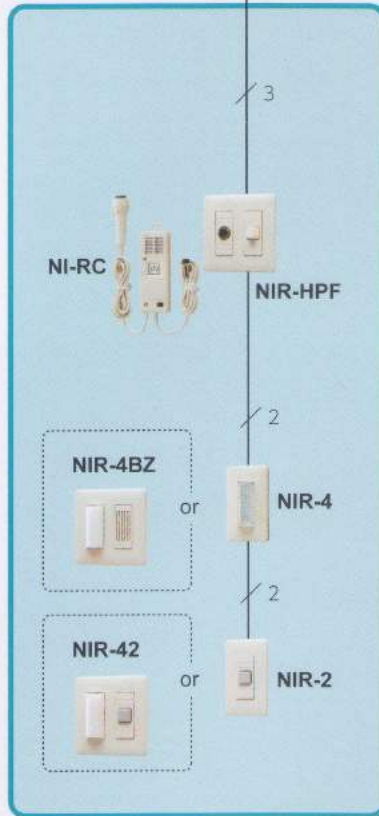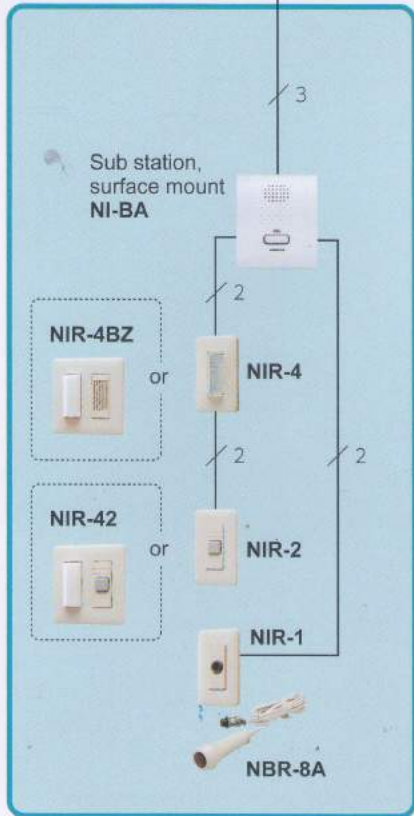

■ System capacity

The number of sub stations is subject to the type of master station.

Master station		Sub station (Qty)	Personal computer (Qty)
Model	Qty		
NIM-20B	1	20	1
NIM-40B	1	40	1
Master station, 60-call(*)	1	60	1
Master station, 80-call(*)	1	80	1

(*): Special order product

■ Wiring distance

	Wire diameter	Maximum distance
Master station - sub station	Ø0.65 mm (22 AWG) Ø0.9 mm (19 AWG)	130 m (490') 200 m (650')
Master station - power supply	Ø0.9 mm (19 AWG)	10 m (33')
Master station - call extension speaker (IER-2)	Ø0.9 mm (19 AWG)	50 m (165')

Distributed by :



JQA-0291
Corresponding product:
Standard product
Order product



JQA-EM0453
HEADQUARTERS
TOYOTA FACTORY
TAIHOH SITE
DEVELOPMENT CENTER

 **AIPHONE**[®]
Providing Peace of Mind
<http://www.aiphone.net/>

NIM(E)1508A

All rights reserved. The design and specifications are subject to change without notice for improvement.

Printed in Japan (E)
NB58002AJZ